


Setting up E-net cable on windows 10

1 step 1

1. Right-click on icon 1
2. Open Networks & Internet Settings

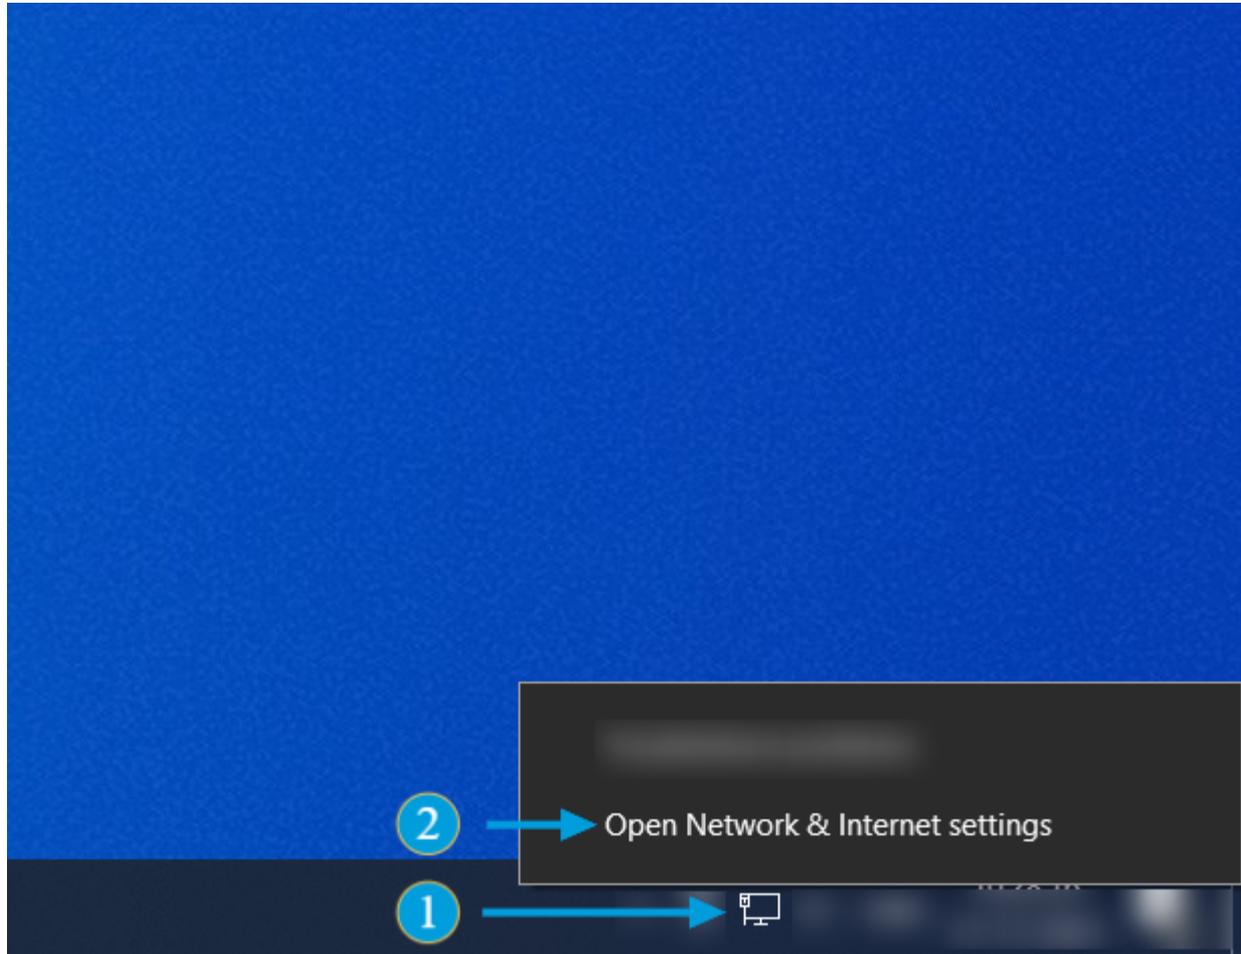


2 Step 2

Open Ethernet settings




3 Step 3

Change adapter options

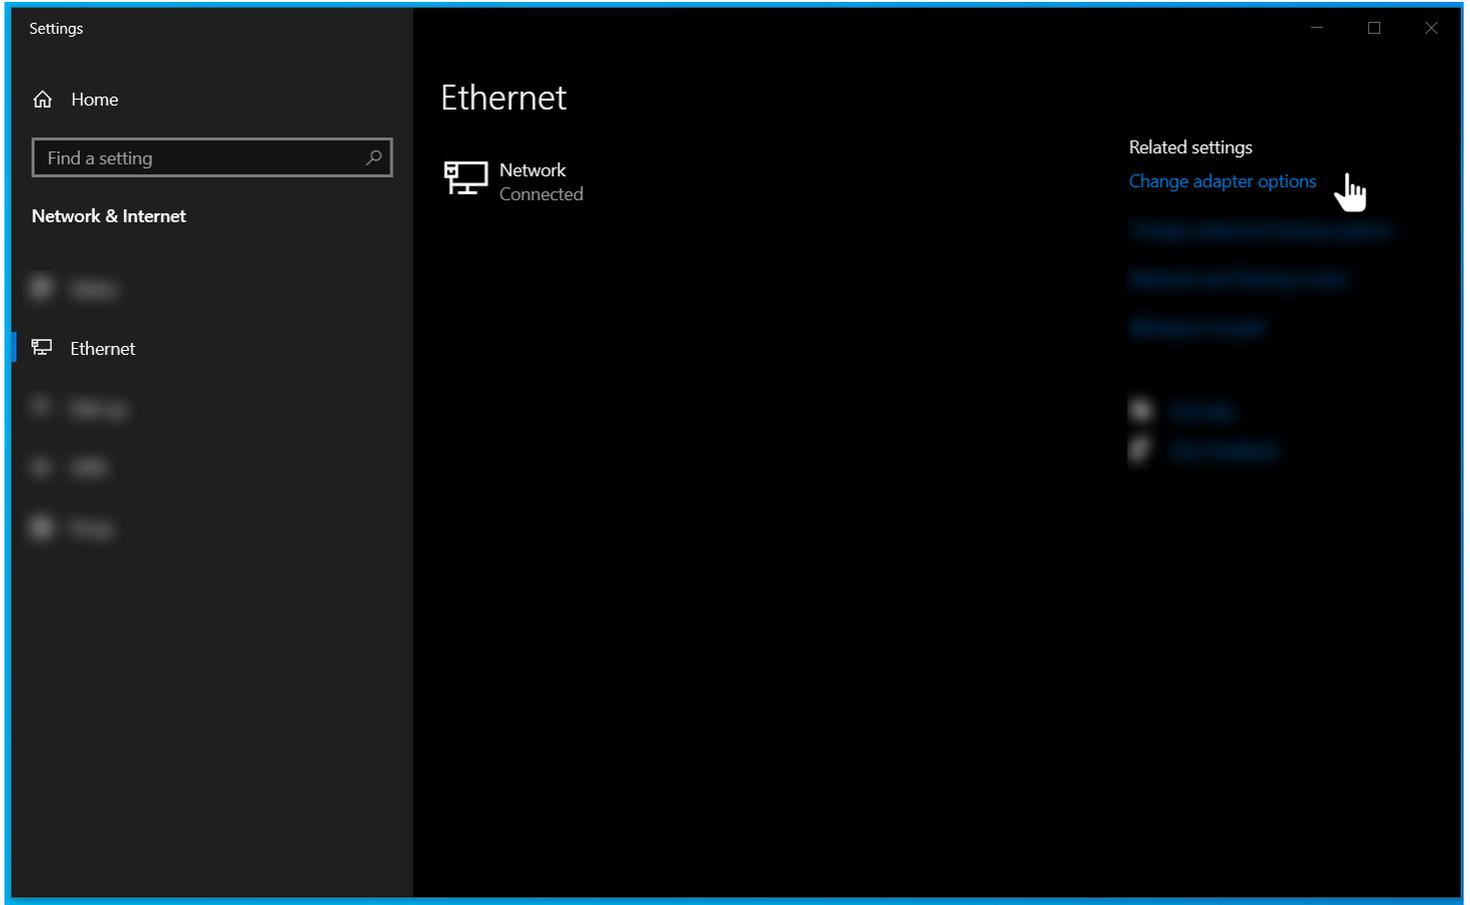


4 Step 4

Right-click on Ethernetadapter where E-net cable is connected to.

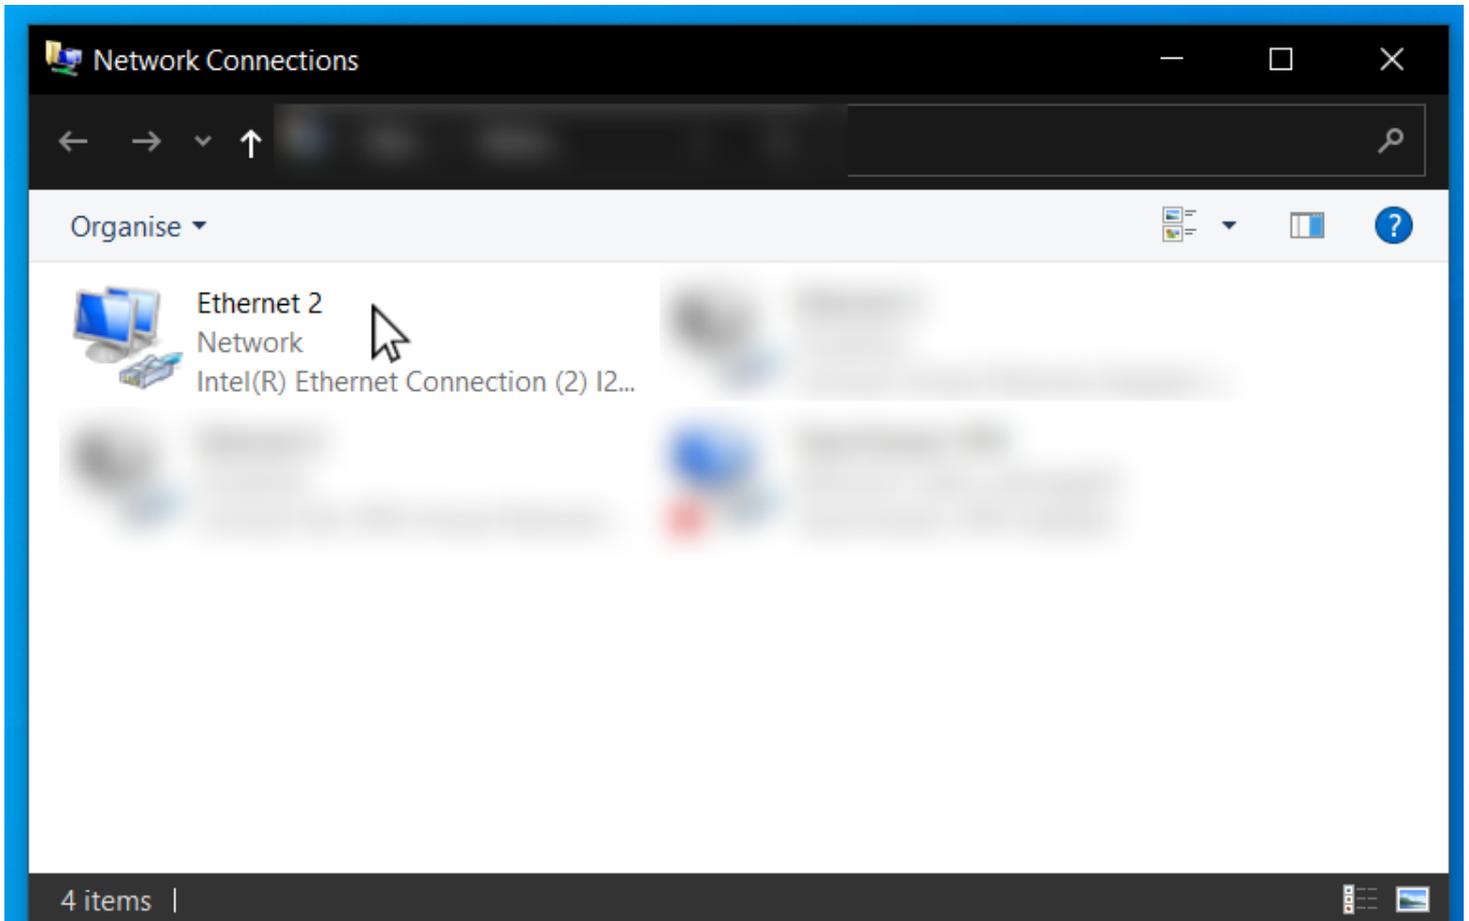


5 Step 5

Click Properties

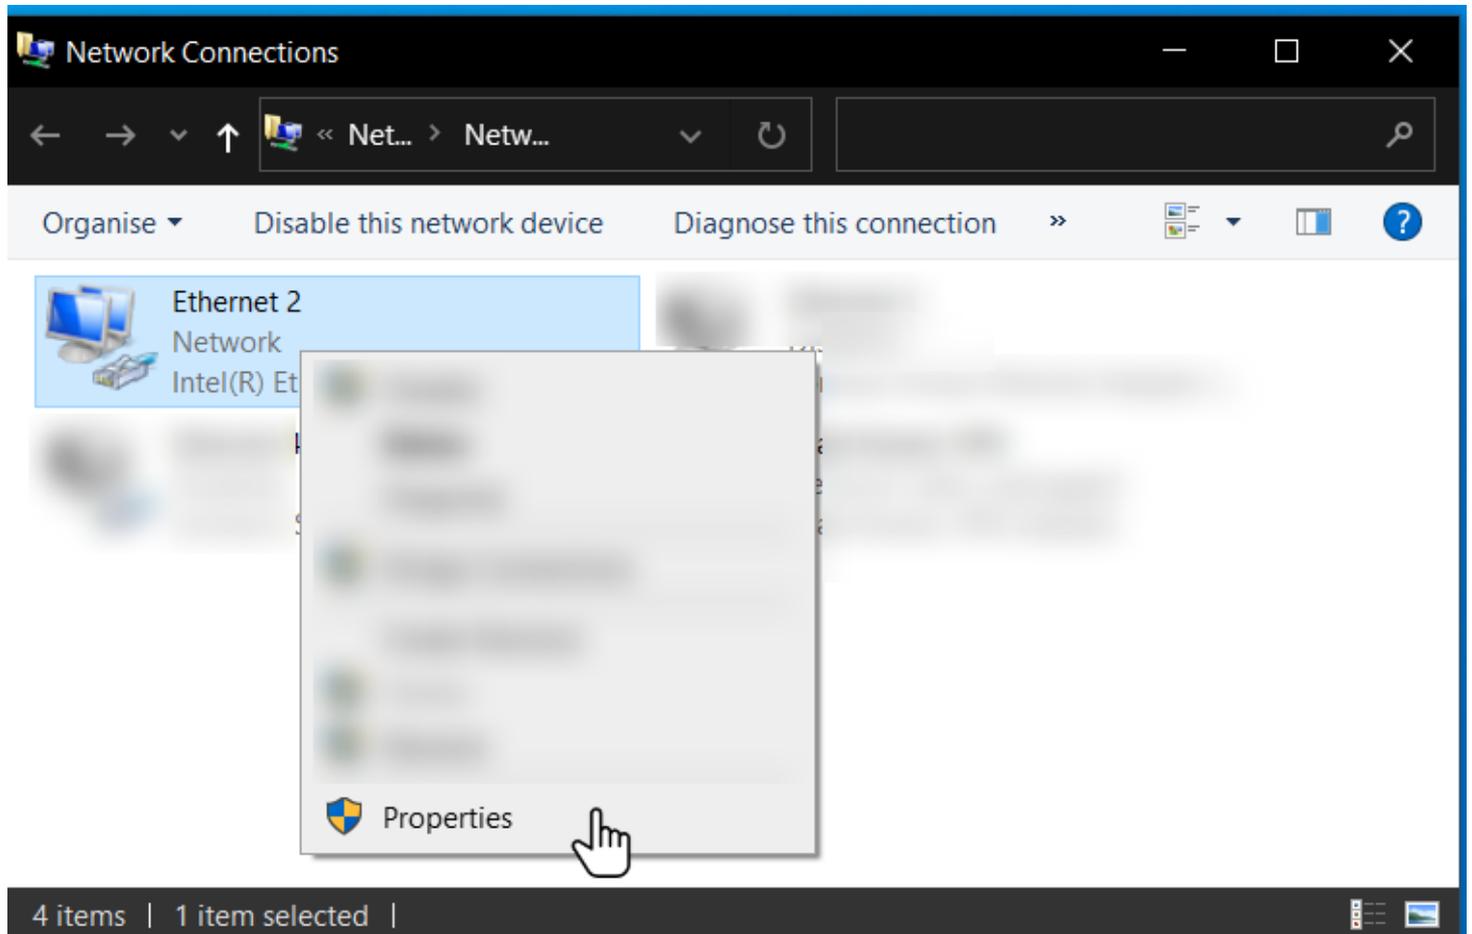


6 Step 6

1. Select Internet Protocol Version 4 (TCP/IPv4)
2. Click Properties

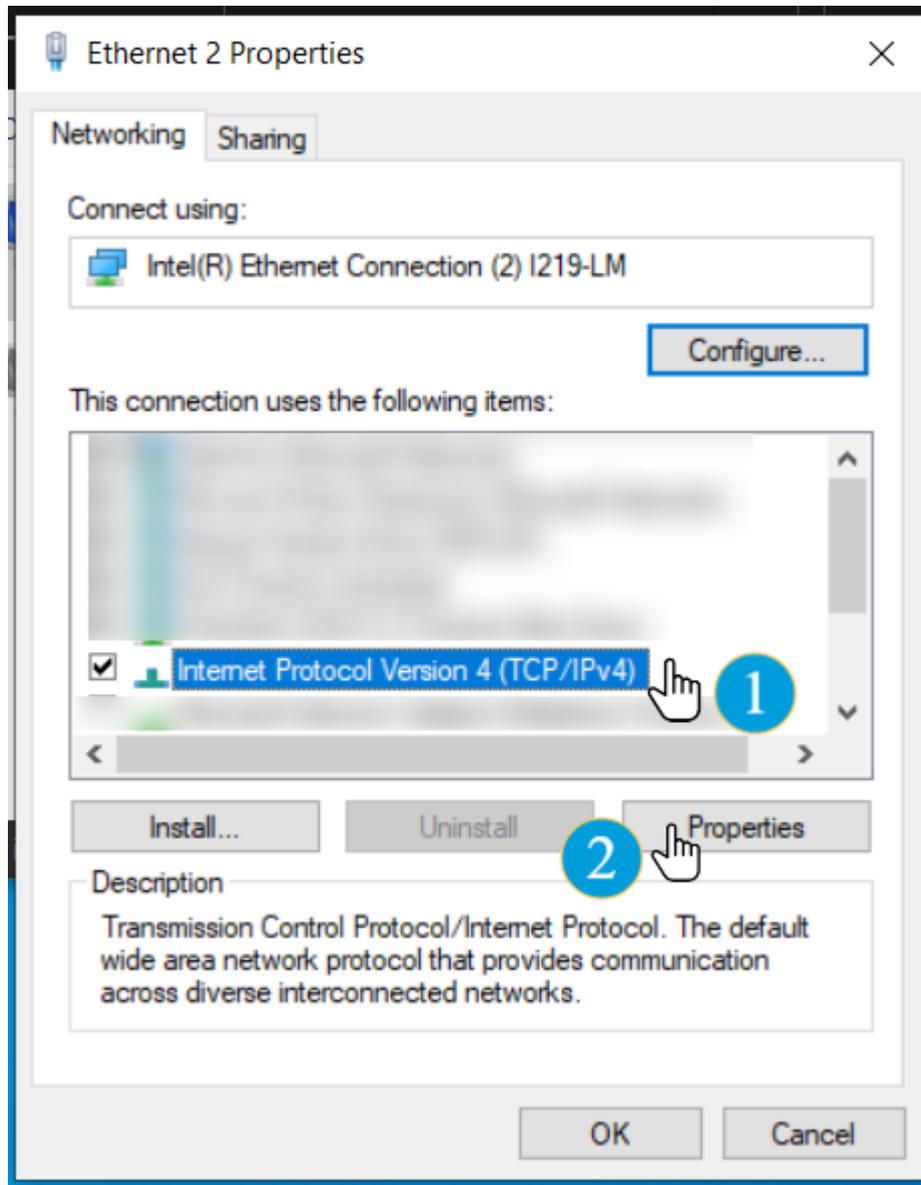

7 Step 7

Click Use the following IP address:

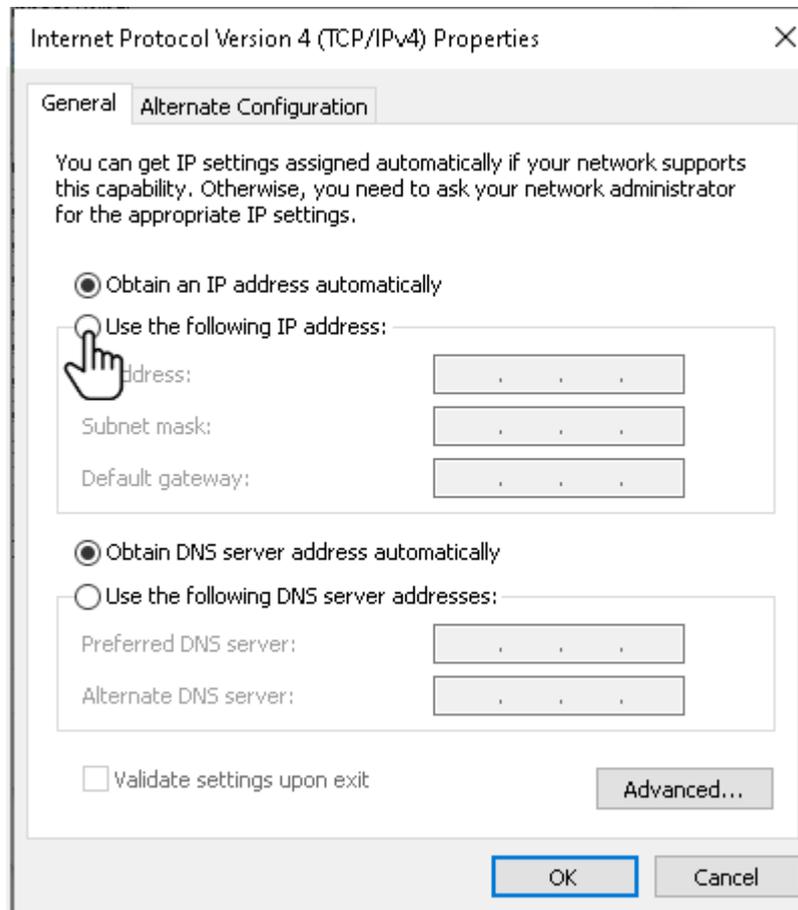

Internet Protocol Version 4 (TCP/IPv4) Properties

General Alternate Configuration

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

Obtain an IP address automatically

Use the following IP address:

Address:

Subnet mask:

Default gateway:

Obtain DNS server address automatically

Use the following DNS server addresses:

Preferred DNS server:

Alternate DNS server:

Validate settings upon exit

Advanced...

OK Cancel

8 Step 8

1. Use 192.168.11.1 in the IP address field
2. Use 255.255.255.0 in the Subnet mask field.
3. Click OK

